




Series Soft Starter Manual


www.shuen.com.cn


Product size

88 70 70 000

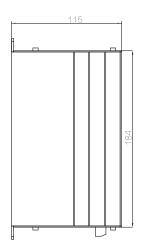

Installation sketch

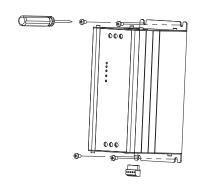

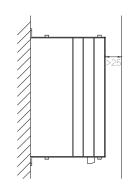

Power diagram

Terminal indication	
RUN COM 12V RA RB	

Model	230V/KW	400V/KW	Rated current
AJR3-N5R5	3	5.5	12
AJR3-N7R5	4	7.5	16
AJR3-N11	5.5	11	25
AJR3-N15	7.5	15	30
AJR3-N18	7.5	18.5	37
AJR3-N22	11	22	45
AJR3-N30	15	30	60
AJR3-N37	18.5	37	72
AJR3-N45	22	45	85

Wiring diagram

Main circuit terminal instruction

Terminals	Terminal name	Function instruction
L1,L2,L3	Main circuit power input	To connect 3 phase power
T1,T2,T3	Soft starter output connection	To connect 3 phase motor

Main circuit

Control circuit terminal instruction

Terminals	Terminal name	Function instruction
RUN	Startup Input	run & com close, motor starts running run & com open, motor stops
COM	Common port	run & 12V's common port
12V	Power port	Internal 12V power output terminal, max current is 300A, overload forbidden
RA,RB	Working status indication	Relay output, normal open contact, running close, stop or break off in error, relay capacity: 250V/AC 0.3A


Indicator lamp

ON: power on


RUN/TOR: flicker when startup or stop,

bypass running Error: LED1, LED3 flickers at the same time

Voltage slope

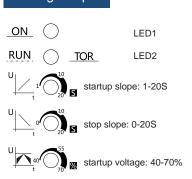



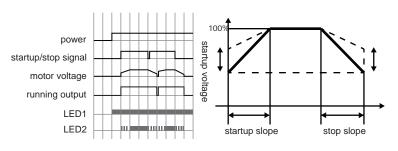



SSTSeries Soft Starter Manual

Internal Bypass Contactor

Free of bypass contactor, save time and labor and space

Top brand component

Germany SEMIKRON, international SCR module talian STMicroelectronics main control DSP chip

Alloy high intensity body

Metal processing technology and oxidation technics Aluminum high strength body, anti-corrision

Control unit & Internal power supply design No need power supply for control unit, no three phase

Free of setting, fast arranging

No need to set for motor or internal intelligent process

"Pocket Size" Body

Integrated with bypass contactor, reduced 40% of the volume

